

## SCHEDULE 2 UNIQUE CONDITIONS

### 5K Miles (4 months)

Replace engine oil  
 Replace engine oil filter  
 Rotate tires  
 Lubricate all locks and hinges  
 Inspect:  
 Engine coolant level  
 Function of all lights  
 Brake and clutch fluid level  
 Tire inflation pressure and tire wear  
 Washer fluid level

### 10K Miles (8 months)

Replace engine oil  
 Replace engine oil filter  
 Rotate tires  
 Lubricate all locks and hinges  
 Inspect:  
 Engine coolant level  
 Function of all lights  
 Brake and clutch fluid level  
 Tire inflation pressure and tire wear  
 Washer fluid level

### 15K Miles (12 months)

Replace engine oil  
 Replace engine oil filter  
 Rotate tires  
 Clean air filter  
 - 2008 MY only  
 Lubricate all locks and hinges  
 Inspect:  
 Engine coolant level  
 Function of all lights  
 Brake and clutch fluid level  
 Disc brakes  
 Tire inflation pressure and tire wear  
 Washer fluid level

### 20K Miles (16 months)

Replace engine oil  
 Replace engine oil filter  
 Rotate tires  
 Lubricate all locks and hinges  
 Inspect:  
 Engine coolant level  
 Function of all lights  
 Brake and clutch fluid level  
 Tire inflation pressure and tire wear  
 Washer fluid level

### 25K Miles (20 months)

Replace engine oil  
 Replace engine oil filter  
 Replace cabin air filter  
 - Every 25,000 miles or 2 years  
 Rotate tires  
 Lubricate all locks and hinges  
 Inspect:  
 Engine coolant level  
 Function of all lights  
 Brake and clutch fluid level  
 Tire inflation pressure and tire wear  
 Washer fluid level

### 30K Miles (24 months)

Replace engine oil  
 Replace engine oil filter  
 Replace manual transmission oil  
 Replace rear differential oil  
 Replace brake fluid  
 Rotate tires  
 Clean air filter  
 - 2008 MY only  
 Tighten bolts and nuts on chassis and body  
 Lubricate all locks and hinges  
 Inspect:  
 Drive belts  
 Engine coolant level  
 Fuel lines, hoses and connections\*<sup>2</sup>  
 - 2008 MY Only  
 Fuel lines and hoses\*<sup>2</sup>  
 - 2009, 2010 and 2011 MY only  
 Cooling system  
 - 2008 MY only  
 Function of all lights  
 Brake lines, hoses and connections  
 Brake and clutch fluid level  
 Disc brakes  
 Tire inflation pressure and tire wear  
 Steering operation and linkages  
 Front and rear suspension, ball joints and wheel bearing axial play  
 Driveshaft dust boots  
 Washer fluid level

### 35K Miles (28 months)

Replace engine oil  
 Replace engine oil filter  
 Replace air filter  
 Replace spark plugs  
 Rotate tires  
 Lubricate all locks and hinges  
 Inspect:  
 Engine coolant level  
 Function of all lights  
 Brake and clutch fluid level  
 Tire inflation pressure and tire wear  
 Washer fluid level

### 40K Miles (32 months)

Replace engine oil  
 Replace engine oil filter  
 Rotate tires  
 Lubricate all locks and hinges  
 Inspect:  
 Engine coolant level  
 Function of all lights  
 Brake and clutch fluid level  
 Tire inflation pressure and tire wear  
 Washer fluid level

### 45K Miles (36 months)

Replace engine oil  
 Replace engine oil filter  
 Rotate tires  
 Lubricate all locks and hinges  
 Inspect:  
 Exhaust system and heat shields  
 - Every 45,000 miles or 5 years  
 (Continued)

Engine coolant level  
 Function of all lights  
 Brake and clutch fluid level  
 Disc brakes  
 Tire inflation pressure and tire wear  
 Washer fluid level

### 50K Miles (40 months)

Replace engine oil  
 Replace engine oil filter  
 Replace cabin air filter  
 - Every 25,000 miles or 2 years  
 Rotate tires  
 Clean air filter  
 - 2008 MY only  
 Lubricate all locks and hinges  
 Inspect:  
 Engine coolant level  
 Function of all lights  
 Brake and clutch fluid level  
 Tire inflation pressure and tire wear  
 Washer fluid level

### 55K Miles (44 months)

Replace engine oil  
 Replace engine oil filter  
 Rotate tires  
 Lubricate all locks and hinges  
 Inspect:  
 Engine coolant level  
 Function of all lights  
 Brake and clutch fluid level  
 Tire inflation pressure and tire wear  
 Washer fluid level

### 60K Miles (48 months)

Replace engine oil  
 Replace engine oil filter  
 Replace engine coolant (except FL22 type)\*  
 Replace manual transmission oil  
 Replace rear differential oil  
 Replace brake fluid  
 Rotate tires  
 Tighten bolts and nuts on chassis and body  
 Lubricate all locks and hinges  
 Inspect:  
 Drive belts  
 Cooling system  
 - 2008 MY only  
 Engine coolant level  
 Brake and clutch fluid level  
 Fuel lines, hoses and connections\*<sup>2</sup>  
 - 2008 MY only  
 Fuel lines and hoses\*<sup>2</sup>  
 - 2009, 2010 and 2011 MY only  
 Hoses and tubes for emission\*<sup>2</sup>  
 - 2009, 2010 and 2011 MY only  
 Function of all lights  
 Brake lines, hoses and connections  
 Disc brakes  
 Tire inflation pressure and tire wear  
 Steering operation and linkages  
 Front and rear suspension, ball joints and wheel bearing axial play  
 Driveshaft dust boots  
 Washer fluid level

### Additional Operations & Exceptions

#### Annually

Inspect flat tire repair kit (if installed)\*<sup>3</sup>.

#### Fuel Filter

Replace every 100,000 miles  
 - 2008 MY only

#### Engine Coolant

FL22 type\*<sup>1</sup> - Replace at first 120,000 miles or 10 years; after that, every 60,000 miles or 5 years.

\*Except FL22 type - Replace at first 60,000 miles or 4 years; after that, every 2 years.

\*<sup>1</sup>: Use FL22 type coolant in vehicles with the inscription "FL22" on the radiator cap itself or the surrounding area. Use FL22 when replacing the coolant.

\*<sup>2</sup>: For emissions footnote see owner's manual.

\*<sup>3</sup>: Check the tire repair fluid expiration date every year when performing the periodic maintenance. Replace the tire repair fluid bottle with new one before the expiration date.