

Mazda TRIBUTE 2008-2011



SCHEDULE 2 UNIQUE CONDITIONS

5K Miles (4 months)

Replace engine oil and oil filter*¹
Rotate tires (check wheel lug nut torque)*²
Lubricate all locks and hinges

Inspect:

Engine coolant level
Function of all lights
Brake fluid level
- 2008, 2009, 2010 MY only
Tire inflation pressure and tire wear
Power steering fluid level
Washer fluid level

10K Miles (8 months)

Replace engine oil and oil filter*¹
Rotate tires (check wheel lug nut torque)*²
Lubricate all locks and hinges

Inspect:

Engine coolant level
Function of all lights
Brake fluid level
- 2008, 2009, 2010 MY only
Tire inflation pressure and tire wear
Power steering fluid level
Washer fluid level

15K Miles (12 months)

Replace engine oil and oil filter*¹
Rotate tires (check wheel lug nut torque)*²
Lubricate all locks and hinges

Inspect:

Engine coolant level
Function of all lights
Brake fluid level
- 2008, 2009, 2010 MY only
Disc brakes
Tire inflation pressure and tire wear
Power steering fluid level
Bolts and nuts on chassis and body
Washer fluid level

20K Miles (16 months)

Replace engine oil and oil filter*¹
Rotate tires (check wheel lug nut torque)*²
Lubricate all locks and hinges

(Continued)

Inspect:

Engine coolant level
Function of all lights
Brake fluid level
- 2008, 2009, 2010 MY only
Tire inflation pressure and tire wear
Power steering fluid level
Washer fluid level

25K Miles (20 months)

Replace engine oil and oil filter*¹
Rotate tires (check wheel lug nut torque)*²
Lubricate all locks and hinges

Inspect:

Engine coolant level
Function of all lights
Brake fluid level
- 2008, 2009, 2010 MY only
Tire inflation pressure and tire wear
Power steering fluid level
Washer fluid level

30K Miles (24 months)

Replace engine oil and oil filter*¹
Replace fuel filter*⁴
- 2008 MY only

Replace automatic transmission fluid
- Every 30,000 miles

Replace transfer case fluid (4WD only)*³
- Every 30,000 miles
(2008, 2009 MY only)

Rotate tires (check wheel lug nut torque)*²

Lubricate all locks and hinges

Inspect:

Drive belts (3.0L engine)
Fuel lines and hoses*⁴
Engine cooling system and hoses
Engine coolant level
Function of all lights
Brake lines, hoses and connections
Brake fluid level
- 2008, 2009, 2010 MY only

Disc brakes
Drum brakes
Tire inflation pressure and tire wear
(Continued)

Steering operation and linkages
Bolts and nuts on chassis and body
Power steering fluid level
Front and rear suspension ball joints
Driveshaft dust boots
Exhaust system heat shields
Washer fluid level

35K Miles (28 months)

Replace engine oil and oil filter*¹
Replace air cleaner filter
Rotate tires (check wheel lug nut torque)*²
Lubricate all locks and hinges

Inspect:

Drive belts (2.3L engine)
- 2008 MY only
Drive belts (2.5L engine)
- 2009, 2010, 2011 MY only
Engine coolant level
Function of all lights
Brake fluid level
- 2008, 2009, 2010 MY only
Tire inflation pressure and tire wear
Power steering fluid level
Washer fluid level

40K Miles (32 months)

Replace engine oil and oil filter*¹
Rotate tires (check wheel lug nut torque)*²
Lubricate all locks and hinges

Inspect:

Engine coolant level
Function of all lights
Brake fluid level
- 2008, 2009, 2010 MY only
Tire inflation pressure and tire wear
Power steering fluid level
Washer fluid level

SCHEDULE 2 UNIQUE CONDITIONS (CONTINUED)

45K Miles (36 months)

Replace engine oil and oil filter*¹
 Rotate tires (check wheel lug nut torque)*²
 Lubricate all locks and hinges

Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 - 2008, 2009, 2010 MY only
 Disc brakes
 Bolts and nuts on chassis and body
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

50K Miles (40 months)

Replace engine oil and oil filter*¹
 Rotate tires (check wheel lug nut torque)*²
 Lubricate all locks and hinges

Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 - 2008, 2009, 2010 MY only
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

55K Miles (44 months)

Replace engine oil and oil filter*¹
 Rotate tires (check wheel lug nut torque)*²
 Lubricate all locks and hinges

Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 - 2008, 2009, 2010 MY only
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

60K Miles (48 months)

Replace engine oil and oil filter*¹
 Replace fuel filter*⁴
 - 2008 MY only
 Replace spark plugs
 - Every 60,000 miles
 (2008 MY: 2.3L & 3.0L engines)
 (2009, 2010, 2011 MY: 2.5L engine)
 Replace automatic transmission fluid
 - Every 30,000 miles
 Replace transfer case fluid (4WD only)*³
 - Every 30,000 miles
 (2008, 2009 MY only)
 Rotate tires (check wheel lug nut torque)*²
 Lubricate all locks and hinges
 (Continued)

Inspect:

Drive belts (3.0L engine)
 Fuel lines and hoses*⁴
 Hoses and tubes for emission*⁴
 Engine cooling system and hoses
 Engine coolant level
 Function of all lights
 Brake lines, hoses and connections
 Brake fluid level
 - 2008, 2009, 2010 MY only
 Disc brakes
 Drum brakes
 Tire inflation pressure and tire wear
 Steering operation and linkages
 Bolts and nuts on chassis and body
 Power steering fluid level
 Front and rear suspension ball joints
 Driveshaft dust boots
 Exhaust system heat shields
 Washer fluid level

Additional Operations & Exceptions

PCV Valve*⁴

Replace every 100,000 miles.
 - 2008, 2009 MY: 3.0L engine

Engine Coolant (Yellow)

Replace at first 100,000 miles or 72 months; after that, every 50,000 miles or 36 months thereafter.
 - 2008, 2009, 2010, 2011 MY:
 Through November 14, 2010 production.

Engine Coolant (Orange)

Replace at first 100,000 miles or 72 months; after that, every 50,000 miles or 36 months thereafter.
 - 2011 MY only: November 15, 2010 and later production.

Manual Transmission Fluid

Replace every 100,000 miles.

Rear Differential Fluid (4WD only)*³

Replace every 100,000.

Engine Valve Clearance

Audible inspect every 75,000 miles, if noisy, adjust.
 - 2008 MY: 2.3L engine
 - 2009, 2010, 2011 MY: 2.5L engine

Spark Plugs (3.0L engine)

Replace every 75,000 miles.
 - 2009, 2010, 2011 MY only

*¹: When use of E85 is 50% of the time or greater, refer to the owner's manual for additional information.

*²: The wheel lug nuts must be retightened to the proper specifications at 500 miles of new vehicle operation, at any wheel change, or at any other time the wheel lug nuts have been loosened. Refer to Wheel Lug Nut Torque Specification in the Tires, Wheels and Loading chapter for the proper lug nut torque specification.

*³: If this component has been submerged in water, the oil should be changed.

*⁴: For emissions footnote see owner's manual