

SCHEDULE 2 UNIQUE CONDITIONS

5K Miles (4 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges

Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

10K Miles (8 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges

Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

15K Miles (12 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges

Inspect:

Engine coolant level
 Disc brakes
 Function of all lights
 Brake fluid level
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

20K Miles (16 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Clean air filter (3.7L engine)
 - 2009, 2010 and 2011 MY only
 Lubricate all locks and hinges

Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

25K Miles (20 months)

Replace cabin air filter
 - Every 25,000 miles or 2 years
 Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges

Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Tire inflation pressure and tire wear
 (Continued)

Power steering fluid level
 Washer fluid level

30K Miles (24 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Tighten bolts and nuts on chassis and body
 Lubricate all locks and hinges

Inspect:

Drive belts (3.0L engine)
 - 2008 MY only
 Cooling system
 - 2008 MY only
 Engine coolant level
 Fuel lines and hoses*²
 Function of all lights
 Brake lines, hoses and connections
 Disc brakes
 Brake fluid level
 Tire inflation pressure and tire wear
 Steering operation and linkages
 Front and rear suspension, ball joints and wheel bearing axial play
 Power steering fluid level
 Driveshaft dust boots
 Washer fluid level

35K Miles (28 months)

Replace air filter
 - 2008 2.3L & 3.0L; 2009, 2010 and 2011 2.5L & 3.7L engines

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges

Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Drive belts (2.3L engine)
 - 2008 MY only
 Drive belts (2.5L engine)
 - 2009, 2010 and 2011 MY only
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

40K Miles (32 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges

Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

45K Miles (36 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Lubricate all locks and hinges
 (Continued)

Inspect:

Engine coolant level
 Exhaust system and heat shields
 - Every 45,000 miles or 5 years
 Function of all lights
 Brake fluid level
 Disc brakes
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

50K Miles (40 months)

Replace cabin air filter
 - Every 25,000 miles or 2 years
 Replace engine oil
 Replace engine oil filter
 Rotate tires

Lubricate all locks and hinges

Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

55K Miles (44 months)

Replace engine oil
 Replace engine oil filter
 Rotate tires
 Clean air filter (3.7L engine)
 - 2009, 2010 and 2011 MY only
 Lubricate all locks and hinges

Inspect:

Engine coolant level
 Function of all lights
 Brake fluid level
 Tire inflation pressure and tire wear
 Power steering fluid level
 Washer fluid level

60K Miles (48 months)

Replace engine oil
 Replace engine oil filter
 Replace engine coolant (except FL22 type)*
 Replace spark plugs¹
 Rotate tires

Tighten bolts and nuts on chassis and body
 Lubricate all locks and hinges

Inspect:

Drive belts (3.0L engine)
 - 2008 MY only
 Cooling system
 - 2008 MY only
 Engine coolant level
 Fuel lines and hoses*²
 Function of all lights
 Brake lines, hoses and connections
 Disc brakes
 Brake fluid level
 Tire inflation pressure and tire wear
 Steering operation and linkages
 Front and rear suspension, ball joints and wheel bearing axial play
 Power steering fluid level
 Hoses and tubes for emission*²
 Driveshaft dust boots
 Washer fluid level

Additional Operations & Exceptions

Spark Plugs

- 2008 2.3L & 3.0L; 2009, 2010 and 2011 2.5L & 3.7L engines:
 Replace every 60,000 miles.

Engine Valve Clearance

- 2008 2.3L; 2009, 2010 and 2011 2.5L engines: Audible inspect every 75,000 miles, if noisy, adjust.

Drive Belts (3.7L engine)

- 2009, 2010 and 2011 MY only:

Inspect every 100,000 miles.
 Replace every 150,000 miles.

Engine Coolant

FL22 type*¹ - Replace at first 120,000 miles or 10 years; after that, every 60,000 miles or 5 years.

Except FL22 type - Replace at first 105,000 miles or 5 years; after that, every 30,000 miles or 2 years.
 - 2008 MY only

*Except FL22 type - Replace at first 60,000 miles or 4 years; after that, every 2 years.
 - 2009, 2010 and 2011 MY only

*¹: Use FL22 type coolant in vehicles with the inscription "FL22" on the radiator cap itself or the surrounding area. Use FL22 when replacing the coolant.

*²: For emissions footnote see owner's manual.