


## 32 34 020 Removing and installing/replacing airbag unit

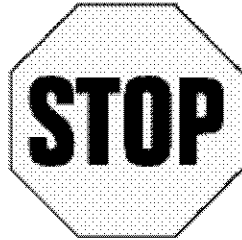


### Warning!

Observe the following instructions to avoid an injury by the airbag unit.

- Comply with safety regulations for handling gas generators.
- Do not exert any force on the airbag unit.
- Use only specified tools for releasing the


Note: Incorrect handling may result in triggering airbag unit and thereby cause serious injury.

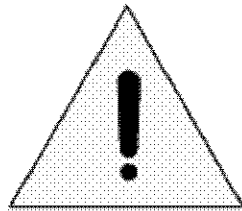

### Important!

Steering wheel must be replaced if airbag unit has been triggered!


Follow procedure after airbag triggering.

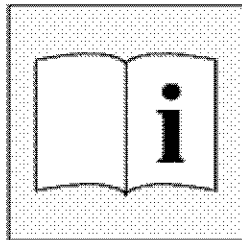

### *Necessary preliminary tasks:*

- Disconnect battery negative lead

Insert Torx screwdriver (T20) roughly straight from below into opening on reverse

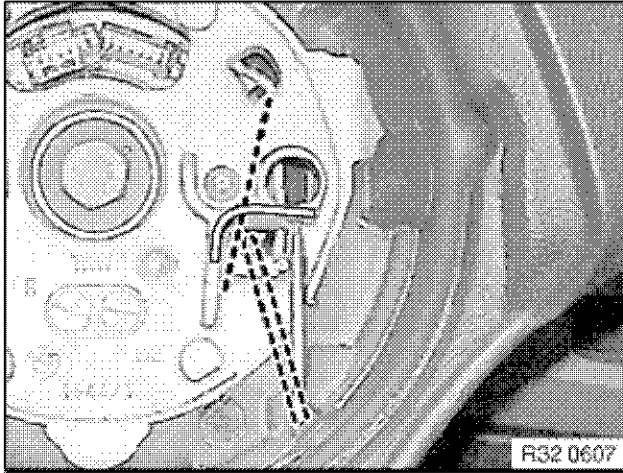

side of steering wheel up to stop (approx. 5.5 cm).


Swing Torx screwdriver (T20) with handle sideways until airbag unit is unlocked.

Repeat procedure on other side.

*Installation:*

Make sure electrical lead is correctly positioned.


Snap airbag unit with uniform pressing force plane-parallel in direction of steering column shaft into steering wheel.

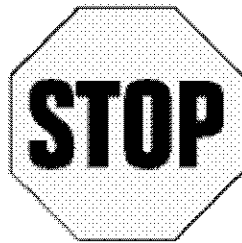

**Warning!**

Danger of injury!

Airbag unit may only be set down with the airbag itself facing upwards.

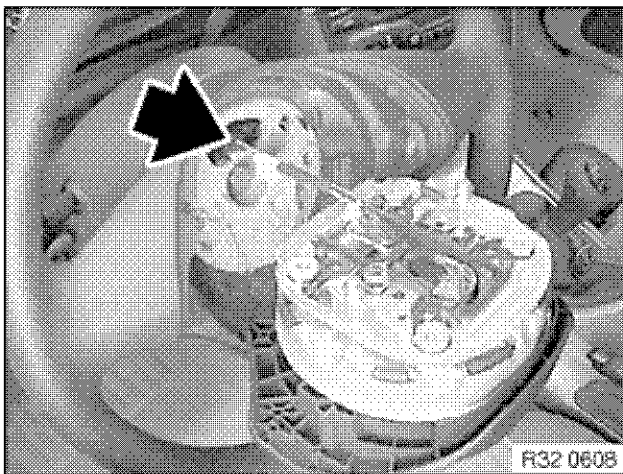

Tilt airbag unit towards rear.

Disconnect plug connection and remove airbag unit.